



DESIGNED TO MOVE [YOU]™

VR209 Quick Reference Guide

Basic Operation



Power On/Off: Press to turn ON or OFF.

INFO/SCROLL: Press & hold to enter CLOCK SETTING MODE until the HOUR flashes on the LCD display. Press SEEK ^/∨ to adjust the HOURS and MINUTES.

Mode: With each press of the button the radio will change through the following modes: TUNER CD, *SIRIUS, *iPOD & AUX.

MUTE: Press to MUTE audio.

EQ/LOUD: Press to select in sequential order: Flat, Rock, Pop, Classical, or Off. Press & hold to turn LOUDNESS ON or OFF.


VOLUME: Rotate CLOCKWISE to INCREASE (+) volume. Rotate COUNTERCLOCKWISE to DECREASE (-) volume.

AUDIO/MENU: Press to access AUDIO MENU. Continue to press to navigate through menu items BASS, TREBLE, BALANCE and FADER. Once desired Audio Menu item is selected, turn VOL/AUDIO SETTING knob to adjust settings. Press & hold to access SYSTEM SETTING MENU.



Aux-In: Use to connect portable audio player.

AM/FM/WB Tuner Controls

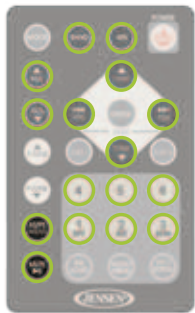

BAND: Press to select preset group FM1, FM2, FM3, AM1, or AM2 each with 6 channel memory locations.

WB: Press to listen to WEATHERBAND.

MUTE: Press to MUTE audio.



SEEK: Press ^ or ∨ to tune to the NEXT or PREVIOUS strongest station.

AS/PS: Press to SCAN through currently stored presets. Press & hold to STORE strongest broadcast stations in your area.

PTY: Press to get program list type. Use the TUNE knob to highlight desired list type. Press SEEK ^/∨ to tune to selected program type stations available.

TUNER: Turn CLOCKWISE to tune UP in frequency. Turn COUNTERCLOCKWISE to tune DOWN in frequency.

STATION STORE BUTTONS:

Press & hold to store current channel playing. Momentarily press to recall stored channel. NOTE: you can store up to 30 channels (6 channels per band FM1, FM2, FM3, AM1, AM2).

CD/MP3/WMA Player Controls



INFO/SCROLL: Press to scroll through song TITLE, ARTIST, and ALBUM information when available.

PLAY/PAUSE: Press to PLAY or PAUSE current audio.

EJECT: Press to EJECT CD.

SEEK: Press ^ or ∨ to select the NEXT or PREVIOUS track. Press & hold to FAST FORWARD or REWIND current track.

1 RPT: Press to REPEAT current playing track. Press to release function.


2 INT: Press when CD is playing to play each track for 10 seconds in sequential order. Press again to select current song.

3 RDM: Press when CD is playing to play each track in RANDOM order. Press again for NORMAL play.

5 DN: Press to skip to the NEXT folder when playing an MP3/WMA CD with folder structure.

6 UP: Press to skip to the PREVIOUS folder when playing an MP3/WMA CD with folder structure.

SIRIUS® Radio Controls*

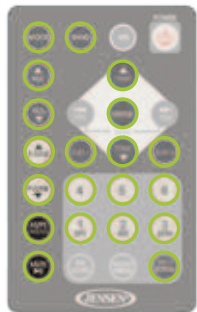

INFO/SCROLL: Press to scroll through song TITLE, ARTIST, and ALBUM info. In the CATEGORY LIST press to cycle through song TITLE, ARTIST, and ALBUM info on other desired channels while listening to current station.

BAND: Press to select preset group SIR1, SIR2, or SIR3 each with 6 channel memory locations.

MODE: Press & hold to LOCK or UNLOCK current tuned channel. Enter code using 1-6 preset buttons.

MUTE: Press to MUTE audio.



SEEK: Press ^ or v to view the available category types. Use the TUNE knob to scroll through available channels within the category. To choose the selected channel press the TUNE/ENTER knob.

AS/PS: Press to play 10 seconds of each currently stored preset. Press & hold to enter PRESET TUNE MODE. Use TUNE knob to cycle through each currently stored presets.

PTY: Press & hold to edit LOCK CODE. Enter code using 1-6 preset buttons.

TUNE: Turn CLOCKWISE to tune UP a channel. Turn COUNTERCLOCKWISE to tune DOWN a channel.

DIRECT ENTER: Press & hold to directly enter station number. Use TUNE knob to change number. Press again to select desired number.

STATION STORE BUTTONS:

Press & hold to store current channel playing. Momentarily press to recall stored channel. NOTE: you can store up to 18 channels (6 channels per band SIR1, SIR2, SIR3).

iPod® Controls*



PLAY/PAUSE: Press to PLAY or PAUSE current audio.



 
SEEK: Press ^ or v to tune to the NEXT or PREVIOUS track. Press & hold to FAST FORWARD or REWIND current track.

iMENU: Press to access the play list and available search modes. Use the TUNE knob to navigate through the available play lists. Push the TUNE/ENTER knob to make selection.

1 RPT: Press to REPEAT current playing track. Press to release function.

3 RDM: Press when iPod is playing to play each song in RANDOM order. Press again for NORMAL play.

USB Controls*

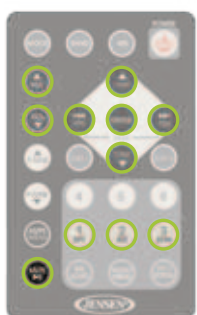

PLAY/PAUSE: Press to PLAY or PAUSE current audio.



USB INPUT: For connecting a USB Jump Drive. NOT FOR iPod CONTROLS.

SEEK: Press ^ or v to tune to next track. Press & hold to FAST FORWARD or REWIND current track.

1 RPT: Press to REPEAT current playing track. Press to release function.

2 INT: Press when USB is playing to play each track for 10 seconds in sequential order. Press again to select current song.

3 RDM: Press when USB is playing to play each track in RANDOM order. Press again for NORMAL play.

5 DN: Press to skip to the PREVIOUS folder with folder structure.

6 UP: Press to skip to the NEXT folder with folder structure.

Activating your SIRIUS® Subscription —

Before you can listen to Sirius Satellite Radio, you must subscribe to the service.

1. With the radio power ON, press the MODE button to enter Sirius Ready mode. After displaying the SIRIUS logo, the Receiver will update all the SIRIUS channels.

NOTE: Don't push any buttons or perform any operations until updating has been completed.

2. Once updated and the SIRIUS channels are received, the display will change to "Call 1-888-539-SIRIUS to Subscribe" and will place you in SIRIUS Satellite Radio's Preview Channel. Channel 184 is the SIRIUS preview channel. You will not be able to tune to any other Sirius Radio channels until you activate your subscription.

3. You will need to access your Sirius ID, which is displayed on channel 000. Press and hold the TUNE knob on the radio to enter Direct Tuning mode. Using the Tune Adjust UP/DN knob, select digits 000. Press the TUNE/ENTER knob to enter your selection. This will display your unit's unique 12-digit SIRIUS ID Number.

4. Write the Sirius ID number down and have your credit card handy.

5. Contact SIRIUS on the Internet: <https://activate.siriusradio.com/> Follow the prompts to activate your subscription. You can also call SIRIUS toll-free at: 1-888-539-SIRIUS (1-888-539-7474)