



DESIGNED TO MOVE [YOU]®

JWM6A

QUICK REFERENCE GUIDE

Basic Operation

POWER: Push to turn ON or OFF.

MODE/DISPLAY: Press to cycle through sources. Press & hold to switch between displaying clock or function.

VOLUME: Rotate clockwise to increase volume or counter-clockwise to decrease volume.



AUDIO/MENU: Press to bring up AUDIO ADJUSTMENT options: BASS, TREBLE, BALANCE (left to right), & FADE (front to back). LOUD (on/off), EQ: User, Flat, Pop, Classic, Rock.

Press & hold to bring up MENU options: BEEP, ADJUST LCD BRIGHTNESS, TUNING REGION, LOW BATTERY ALERT, BLUETOOTH (ON/OFF), PRESET VOLUME, RESET. VOLUME KNOB will adjust each MENU option *except* for 'RESET'.

SPEAKER OUTPUT: Press any speaker button (A, B or C) to control corresponding speaker output from the stereo. SPK A, SPK B, SPK C will appear on the display.

AUX IN: Insert 3.5mm cable from your portable media device.

App Control



App download and operation:

jControl app controls all of the primary functions of the JWM6A directly from your phone or tablet. It can be found by searching for "JENSENjControl".

After downloading and installing app, pair your device to the JWM6A as instructed in "Bluetooth Operation" section in this guide. Once your device is paired, open the app and use as instructed. (Device *must* be paired to JWM6A *before* opening and using app).

Entire owner's manual for jControl app can be found at <http://asaelectronics.com/manuals-guides>.

Tablet Interface



Mode Menu

Audio Menu

Power

App Info

Back Play/Pause/Mute Forward Volume Control

AM/FM Tuner Controls

MUTE: Press to MUTE volume. Press again to resume volume.

MODE: Press repeatedly until you reach TUNER mode displayed as a frequency.

STATION STORE PRESETS: Press & hold to store current station. Press once to recall stored channel. NOTE: Up to 18 FM & 12 AM channels can be stored.

BAND: Press to select between two AM BANDS (AM1, AM2) & three FM BANDS (FM1, FM2, FM3).



TUNE/SEEK/TRACK: Press >>| button to tune frequency higher. Press << button to tune frequency lower. Press and hold to scan to next strongest station.

AS/PS: Press to SCAN through currently stored presets. Press & hold to STORE strongest broadcast stations in your area.

VOLUME: Rotate clockwise to increase volume or counter-clockwise to decrease volume.

CD/DVD Player Controls

PLAY/PAUSE: Press to PLAY or PAUSE current audio or video.

MODE/DISPLAY: Press repeatedly until you reach DISC mode.

- 1: Press to hear brief 10 sec. intro of every song. Press again to disable.
- 2: Press to SHUFFLE songs. Press again for SEQUENTIAL play.
- 3: Press to REPEAT CD track(s) once, continuously, ALL tracks, or to release function. Press to REPEAT a DVD chapter, title, ALL, or to release function.
- 4: Press once to SUSPEND disc play and twice to RESET disc back to first track.
- 5: Press to go to next folder.
- 6: Press to go to previous folder.



TUNE/SEEK/TRACK: Press >>| button to advance to NEXT TRACK or CHAPTER/TITLE. Press <<< button to go back to PREVIOUS TRACK or CHAPTER/TITLE. In CD mode, press & hold to FAST FORWARD or REVERSE current play. In DVD mode, press & hold to enter FAST FORWARD/RW. Press & hold additional times to step through x2, x4, x8, x20. Press PLAY (>||) to resume.

ENTER/SEARCH: Press to confirm menu selection.

EJECT: Press to EJECT CD or DVD.

DVD MENU: Press to enter DVD menu.

VOLUME: Rotate clockwise to increase volume or counter-clockwise to decrease volume.

Bluetooth® Operation

MODE/DISPLAY: Press repeatedly until you reach BLUETOOTH mode.

ANSWERING PHONE: BT audio will automatically pause when a call is answered. It will then resume once call has ended. In some cases, it may be necessary to press the play button to resume the BT audio.



TUNE/SEEK/TRACK: Advance or reverse tracks on your device.

PAIR DEVICE VIA BLUETOOTH: (Make sure the device you intend to pair with is on and Bluetooth is enabled.) While in Bluetooth mode, press & hold ENTER/SEARCH to start the process. The JWM6A will then display 'Pairing' and be able to be paired with for 120 seconds. With your device in Bluetooth settings, 'JWM6A' should appear as an available device. Tap 'JWM6A' to connect. Enter the pairing password (0000), if requested.

AUDIO/MENU: Press & hold to navigate through menu options, until BT menu options is reached. Press ENTER to select DEVICE LIST or PAIR.

USB Playback

PLAY/PAUSE: Press to PLAY or PAUSE current audio or video.

MODE/DISPLAY: Press repeatedly until you reach USB mode.

- 1: Press to hear brief 10 sec. intro of every song. Press again to disable.
- 2: Press to SHUFFLE tracks. Press again for SEQUENTIAL play.
- 3: Press to REPEAT USB track(s) (one, DIR, all, or release function).
- 4: Press once to SUSPEND playback and twice to RESET device back to first track.
- 5: Press to go to next folder.
- 6: Press to go to previous folder.



TUNE/SEEK/TRACK: Press >>| button to advance to NEXT TRACK. Press <<| button to advance to PREVIOUS TRACK. Press & hold additional times to step through x2, x4, x8, x20. Press PLAY (>||) to resume.

ENTER/SEARCH: Press to confirm menu selection.

USB: Connect a USB flash/thumb drive for audio playback and/or charging.

Clock with Alarm

MODE/DISPLAY: Press & hold to access CLOCK VIEW mode.



TIME SET: Press << to adjust hours and >>| to adjust minutes when setting either CLOCK or ALARM time.

ALARM ON/OFF: Press to turn ALARM ON or OFF. While in CLOCK VIEW mode, press & hold to set CLOCK time.

ALARM SET: Press to enter sleep timer: 15, 30, 45, 60, 0 minutes. Press & hold to enter ALARM SET mode.

For owner's manual, please visit <http://www.asaelectronics.com/manuals-guides> or scan this QR code.

